

Section S (Special Tools)

Page 3

Transaxle—continued

RG.383	Differential oil seal remover
RG.384	Clutchshaft oil seal remover
RG.4221B-8 (Replacer pad)	Differential large bearing replacer, adapter (use with RG.359)
RG.367	Reverse gear and pinion nut wrench
RG.368	Needle bearing sleeve remover/replacer
RG.369	Needle bearing remover/replacer
RG.370	Pinion bearing cup replacer adapters
1414	Synchro hub retainer clips (pair)

Hubs and drive shafts

RG.379	Rear hub bearing assembly tool
RG.188/3	Rear hub securing plate, from RG.188C, D or E

Front and Rear suspension

RG.386	Front and rear suspension arm bush remover/replacer
RG.408	Front gap gauges

Steering

RG.385	Swivel pin bush remover/replacer
RG.284	Steering arm taper pin remover

Body and miscellaneous

RG.534	Bezel nut wrench
RG.535	Rubber moulding glazing tool