HEATING AND VENTILATION

(If fitted)

SECTION R

CONTENTS

												Page
DESCRIPTION					• • • • • • • • • • • • • • • • • • • •							3
ADJUSTMENTS AND REG	CTIFICATIO	Ņ							•••			6
HEATER												
									-			
Main unit												
—To remove and refit	MK I and II 1969 models						•••	·				3
Blower	1909 models	•••		•••	•	•••	•••	•••	•••		•••	,
—To remove and refit		•••	•••	•••			•••	•••	•••		•••	3
Control												
												_
—To remove and refit	MK I and II 1969 models					•••	···			•••		5 8
Heater hose												
—To remove and refit			•••		•••			•••	•••		•••	5
Water valve												
—To remove and refit												5
—To remove and rent		•••	••	•••	•••	•••	•••	•••			•••	3
Heater matrix												
—To remove and refit				•••	•••	•••				•••		6
	1969 models	•••	•••	•••	•••		•••	•••	•••	•••	•••	8
Heater												
Husky and Van												
—Differences between	models											7