

## ROUTINE MAINTENANCE OPERATIONS

	Every 250 miles (400 km) or weekly	Every 1,000 miles (1,600 km) or monthly	Service 'A' Every 5,000 miles (8,000 km) or 5 months	Service 'B' Every 10,000 miles (16,000 km) or 10 months	Service 'C' Every 15,000 miles (24,000 km) or 15 months	Service 'D' Every 30,000 miles (48,000 km) or 30 months
<b>COOLING SYSTEM</b> <i>Check when cold</i>						
Top-up radiator level ... ..	×	×	×	×	×	×
Check for leaks ... ..			×	×	×	×
Check specific gravity of anti-freeze ...			×	×	×	×
Check level in radiator bottle (if fitted)...			×	×	×	×
Use correct coolant for prevailing conditions.						
Blow out dirt from radiator ... ..			×	×	×	×
Check water pump fixings for tightness					×	×
<b>ENGINE</b>						
Clean out air cleaner casing; dusty territories ... ..			×	×	×	×
Renew air cleaner element ... ..					×	×
Clean fuel pump filter and sediment chamber ... ..			×	×	×	×
Check valve clearances and adjust if necessary ... ..					×	×
Check fan belt tension and adjust if necessary ... ..			×	×	×	×
Clean and reset sparking plugs ... ..			×		×	
Renew sparking plugs ... ..				×		×
Clean flame trap ... ..			×	×	×	×
Top-up oil in carburettor damper(s) ...			×	×	×	×
Lubricate distributor; clean and adjust contacts and reset ignition timing ...			×	×	×	×
Check engine mounting rubbers for damage or deterioration ... ..						×
<b>BRAKES AND CLUTCH</b>						
Check condition of brake linings, clean out drums and report ... ..				×		×
Adjust brakes ... ..			×	×	×	×
Check handbrake cables for wear ... ..					×	×
Check pipes and hoses for damage, corrosion, chafing or leaks ... ..			×	×	×	×
Top-up master cylinder reservoir as required; check vent is clear ...		×	×	×	×	×
Check rear brake cylinders for free movement ... ..				×		×
Renew servo air filter (if fitted) ... ..						×
<b>STEERING, FRONT AND REAR SUSPENSION, REAR HUBS</b>						
Check front hub bearings for smooth operation and report ... ..			×	×	×	×
Repack front hub bearings with grease and reset end float ... ..						×
Check fixings and ball joints for tightness... ..			×	×	×	×
Inspect rubber dust seals, boots and bushes for damage or deterioration ...			×	×	×	×
Check wheel nuts for tightness ... ..			×	×	×	×
<b>DRIVE SHAFTS</b>						
Check tightness of Rotoflex coupling bolts and condition of universal joints				×		×
<b>ELECTRICAL EQUIPMENT</b>						
Top-up battery ... ..		×	×	×	×	×
Clean battery, terminals and smear with petroleum jelly ... ..				×		×