

Routine maintenance operations—cont.

	Every 250 miles (400 km) or weekly	Every 1,000 miles (1,600 km) or monthly	Service 'A' Every 5,000 miles (8,000 km) or 5 months	Service 'B' Every 10,000 miles (16,000 km) or 10 months	Service 'C' Every 15,000 miles (24,000 km) or 15 months	Service 'D' Every 30,000 miles (48,000 km) or 30 months
Check operation of lamps, horn and wipers/washers	×	×	×	×	×	×
Check starter motor fixing bolts for tightness					×	×
TYRES						
Check pressures	×	×	×	×	×	×
Inspect externally for abnormal wear or damage and report			×	×	×	×
Check tread depth with suitable gauge and report			×	×	×	×
BODY						
Clear door drain holes			×	×	×	×
Check silencer fixings for tightness ...				×		×
LUBRICATION See list of recommended lubricants						
Check engine oil level	×	×				
Change engine oil and filter			×	×	×	×
Top-up transaxle oil			×	×	×	×
Lubricate control pivots, hinges, catches and linkages (carburettor, gear shift and handbrake mechanisms)			×	×	×	×
Lubricate generator rear bearing ...			×	×	×	×
Lubricate clutch slave cylinder push rod pivot			×	×	×	×
Lubricate swivel pins			×	×	×	×
Lubricate drive shaft universal joint grease nipples (if fitted)			×	×	×	×
TEST CAR AND REPORT						
Check for oil, water and brake fluid leaks and report			×	×	×	×

ANNUAL SAFETY SERVICE

The Annual Safety Service should be carried out once a year, irrespective of the mileage covered. This service is additional to the normal routine services. Record the performance of this service, together with details of any work carried out as a result in the appropriate panel at the end of the handbook.

Glasses and Mirrors

- Clean the windscreen and examine for chips and deep scratches which could cause it to splinter.
- Examine rear-view mirrors for any chips or cracks.

Safety Belts

- Check the condition of the safety belts for chafing and security of anchorage.
- In the case of automatic belts, check for correct operation.

Exhaust System

- Start the engine, plug the exhaust tail pipe with a piece of rag and check system for excessive exhaust blow.
- Examine exhaust mountings for breakage and general condition.

Headlamps

- Check headlamp alignment (extra charge if adjustment necessary).

Cooling System and Heater

- Switch on heater blower and check air flow to windscreen.
- Check all coolant hoses for serviceability.

Tyres

- Check pressures; inspect externally for abnormal wear or damage and report.
- Check tread depth with suitable gauge and report.

Windscreen Wipers/Washers

- Check windscreen wiper blades for serviceability and renew if necessary.

Body

- Check all doors for correct operation, including child safety catches (where fitted).

Road Test—Brakes

- During the road test check the efficiency of the footbrake and handbrake with a Ferodo Tapley or similar meter and report.