

IMP VAN AND HUSKY

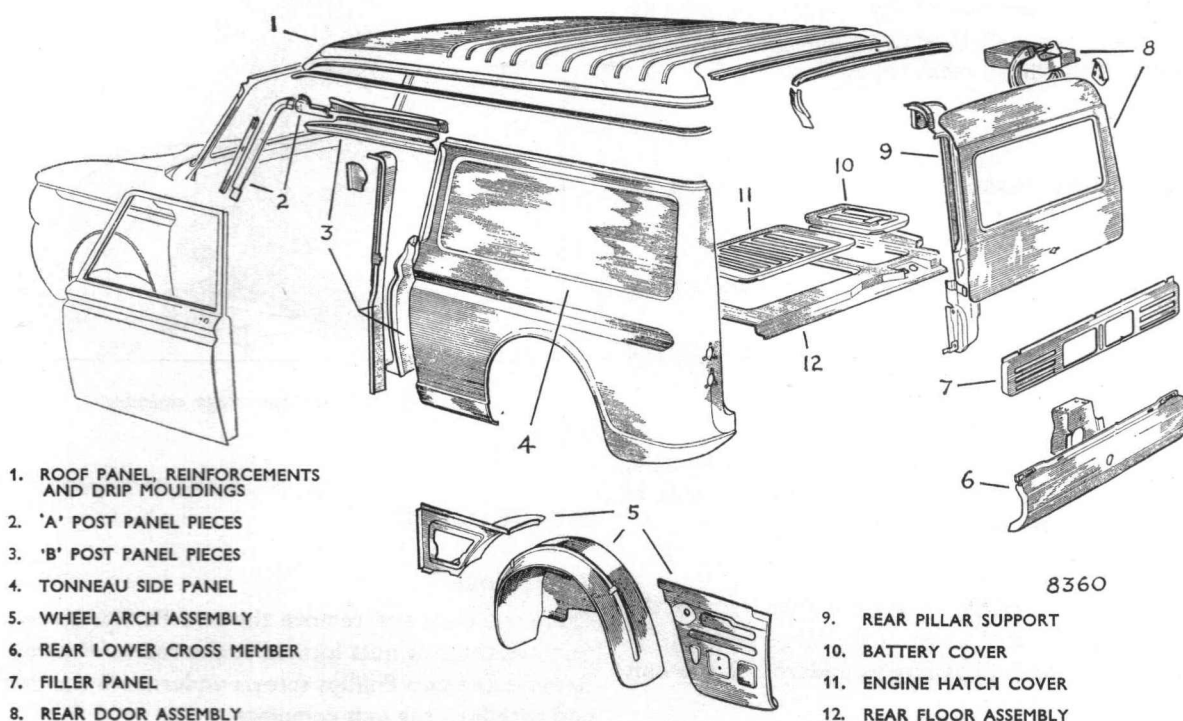


Fig. 25. Imp Van body shell

FILLER PANEL (Number plate mounting plate)**To remove**

Remove the three screws located in the top edge of the panel and lift off.

To refit

Hold the panel in place, fit and tighten the three screws.

ENGINE HATCH COVER

The hatch cover is located by two metal tongues at the forward edge which fit into two slots in the floor. The cover is retained by three fasteners in the rear edge of the cover.

To remove

Using a screwdriver or coin, rotate the three fasteners half a turn anti-clockwise, lift the hatch and remove.

To refit

Place the hatch in position over the floor aperture, locate the two tongues in the holes provided in the edge of the floor and lower the hatch into place.

Lock the fasteners by pressing down and rotating half a turn clockwise.

BATTERY COVER**To remove**

Using a screwdriver or coin, rotate the fastener at the rear of the cover half a turn anti-clockwise, and lift the cover by the small plate provided.

To refit

Place the cover in position over the battery, locate the tongue at the front of the cover into the hole provided in the floor.

Press the cover down into place and lock by turning the fastener half a turn clockwise.