


WIRING DIAGRAM

IMP VAN AND HUSKY

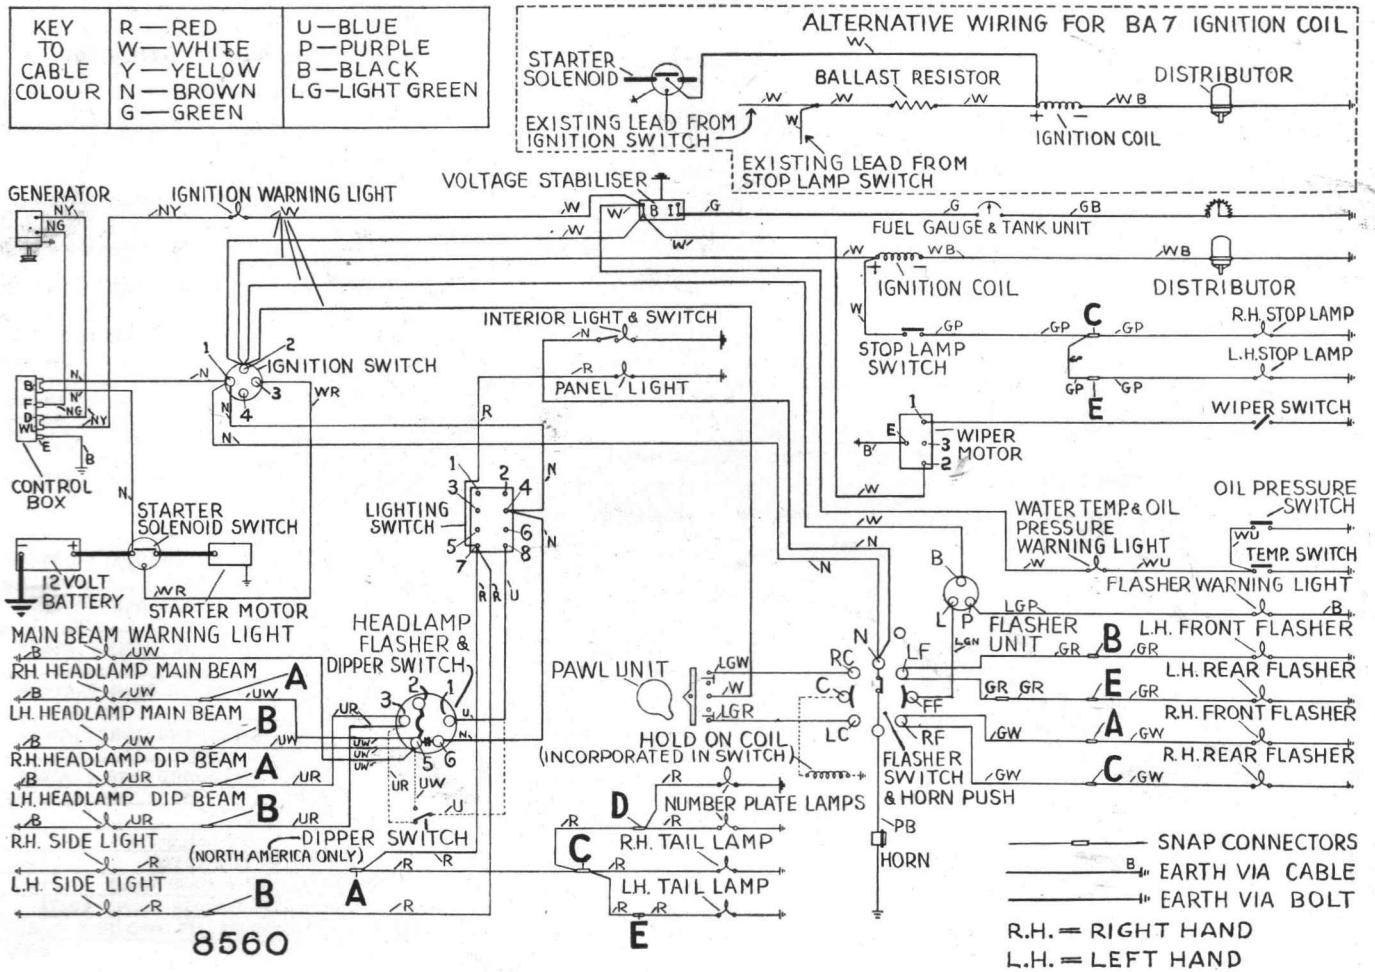

SNAP CONNECTOR LOCATIONS

- A — On right-hand front wing valance beneath glass-fibre moulding.
- B — On left-hand front wing valance beneath glass-fibre moulding.
- C — In engine compartment at right-hand side.
- D — Central behind rear bumper.
- E — In engine compartment at left-hand side.

COMBINED HEADLAMP FLASHER AND DIPPER SWITCH IS REPLACED BY A SINGLE DIPPER SWITCH FOR NORTH AMERICA EXPORT WITH CABLES UR AND UW JOINED BY AN IN-LINE CONNECTOR. CONNECTIONS TO TERMINALS 3 AND 5 ON THE HEADLAMP FLASH-AND-DIP SWITCH ARE REVERSED FOR ALL LEFT-HAND-DRIVE EXPORT EXCEPT NORTH AMERICA AND FINLAND, AND FOOT DIP-LEAD "N" FROM LIGHTING SWITCH TERMINAL 4 TO HEADLAMP FLASH SWITCH TERMINAL 6 DELETED.