


WIRING DIAGRAM

IMP VAN AND HUSKY

From Chassis Number B.463000001 (Van), B.482000001 (Husky)

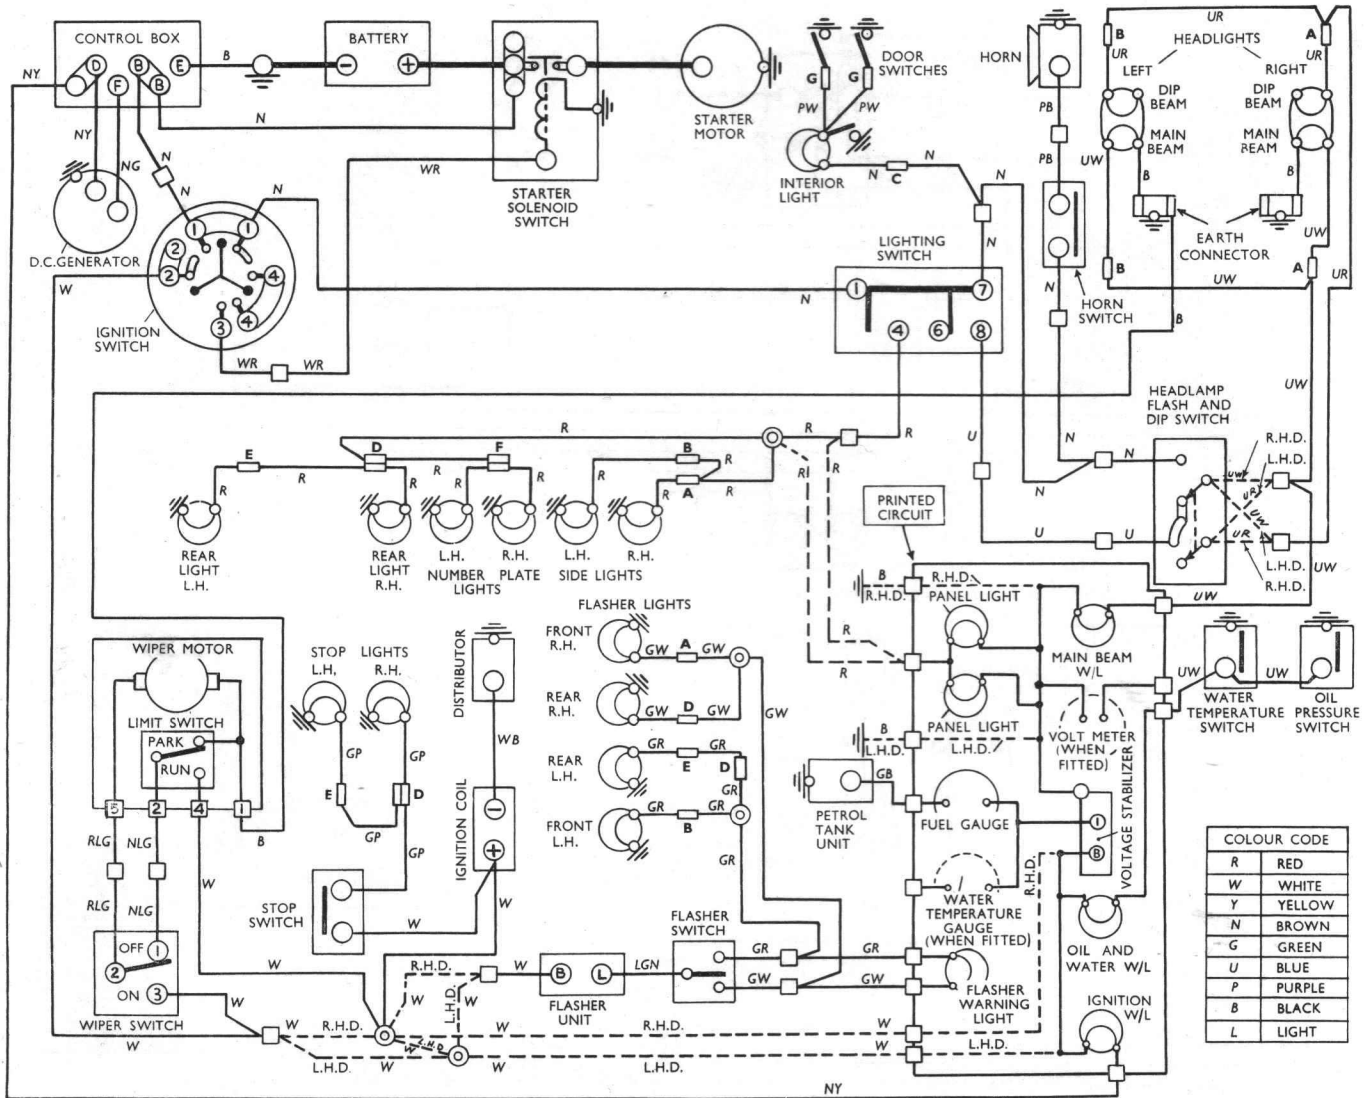

| COLOUR CODE | |
|-------------|--------|
| R | RED |
| W | WHITE |
| Y | YELLOW |
| N | BROWN |
| G | GREEN |
| U | BLUE |
| P | PURPLE |
| B | BLACK |
| L | LIGHT |

SNAP CONNECTOR LOCATIONS

- A —On right-hand front wing valance beneath glass-fibre moulding.
- B —On left-hand front wing valance beneath glass-fibre moulding.
- C —Behind facia at extreme right-hand side.
- D —In engine compartment at right-hand side.
- E —In engine compartment at left-hand side.
- F —Central behind rear bumper.
- G —At door pillar switch.

| ABBREVIATIONS | |
|---------------|------------------|
| W/L | WARNING LIGHT |
| R.H. | RIGHT HAND |
| L.H. | LEFT HAND |
| R.H.D. | RIGHT HAND DRIVE |
| L.H.D. | LEFT HAND DRIVE |

| SYMBOLS | |
|---------|---------------------------|
| | SNAP CONNECTOR |
| | PLUG AND SOCKET CONNECTOR |
| | CRIMPED CONNECTION |
| | EARTH THROUGH UNIT |
| | EARTH THROUGH CABLE |