


WIRING DIAGRAM

IMP (POLICE SPECIFICATION)

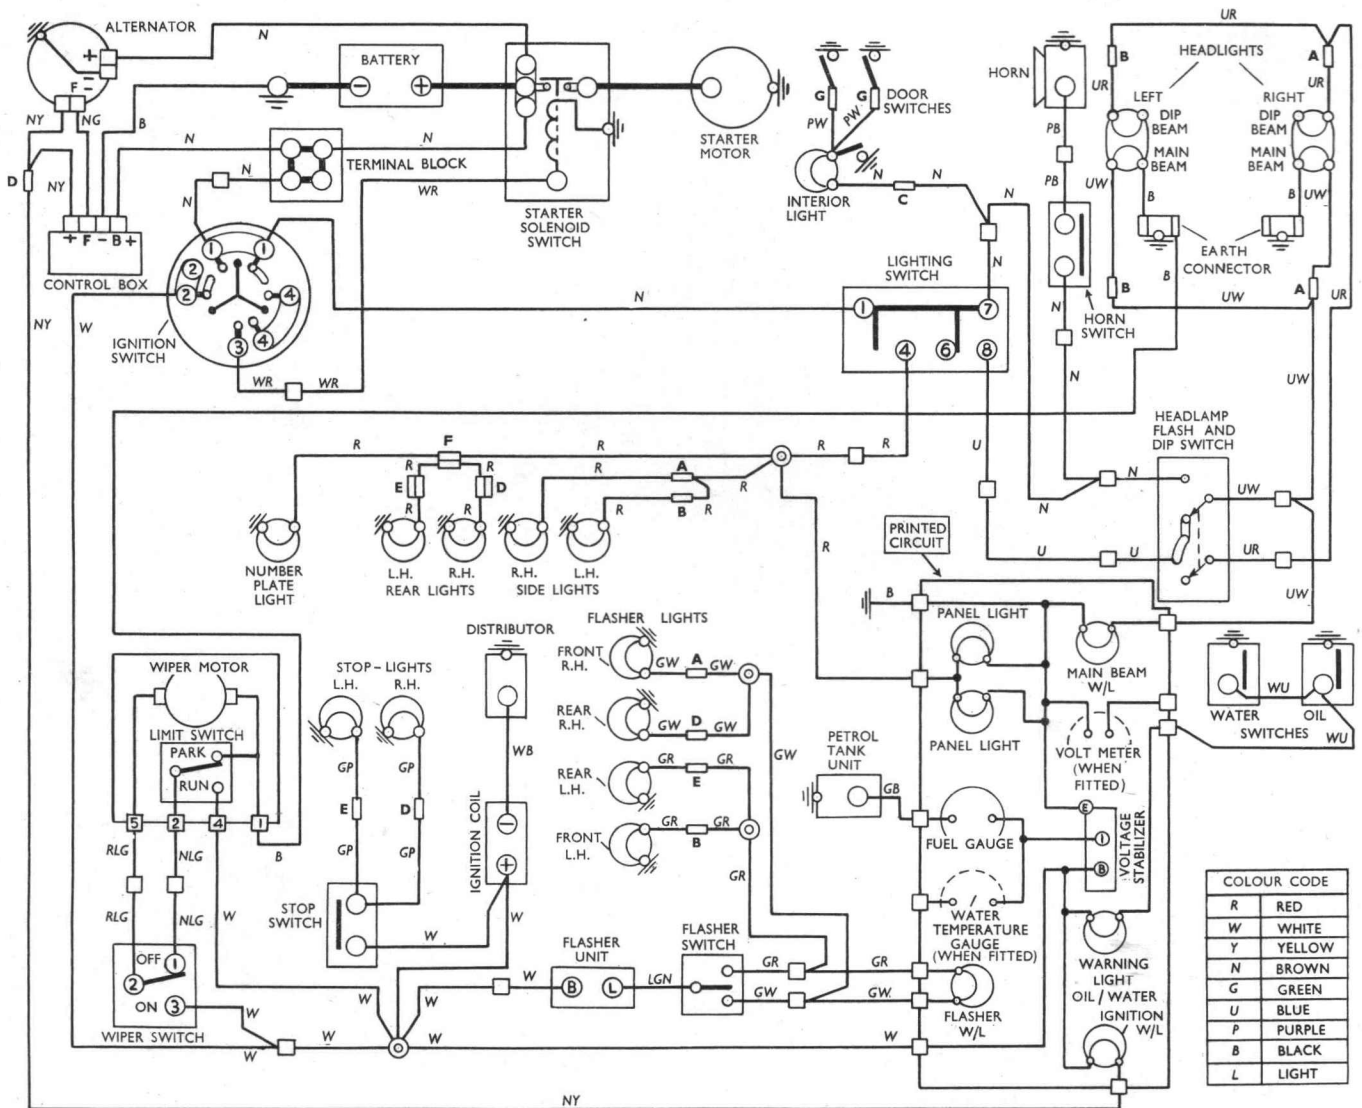

SNAP CONNECTOR LOCATIONS

- A —On right-hand front wing valance beneath glass-fibre moulding.
- B —On left-hand front wing valance beneath glass-fibre moulding.
- C —Behind facia at extreme right-hand side.
- D —In engine compartment at right-hand side.
- E —In engine compartment at left-hand side.
- F —In engine compartment at right-hand side near hinge.
- G —At door pillar switch.

ABBREVIATIONS	
W/L	WARNING LIGHT
R.H.	RIGHT HAND
L.H.	LEFT HAND
R.H.D.	RIGHT HAND DRIVE
L.H.D.	LEFT HAND DRIVE

SYMBOLS	
	SNAP CONNECTOR
	PLUG AND SOCKET CONNECTOR
	CRIMPED CONNECTION
	EARTH THROUGH UNIT
	EARTH THROUGH CABLE