

# BRAKES

## SECTION K

### CONTENTS

	Page
<b>DESCRIPTION</b> ... ..	3
<b>MAINTENANCE</b> ... ..	3
—Brake linings... ..	3
—Front brake shoe adjustment ... ..	3
—Rear brake shoe adjustment ... ..	3
—Handbrake adjustment ... ..	4
—Fluid level ... ..	4
—Renewing the fluid ... ..	21
—Flushing the hydraulic system ... ..	21
—Seals in the hydraulic system ... ..	21
 <b>FRONT BRAKES</b> ... ..	 5
—Description ... ..	5
—Front brake shoes ... ..	5
—To remove and refit ... ..	5
—Front brake back plate ... ..	6
—To remove and refit ... ..	6
—Front wheel cylinders ... ..	7
—To remove and refit ... ..	7
—To dismantle and reassemble ... ..	8
 <b>REAR BRAKES</b> ... ..	 9
—Description ... ..	9
—Rear brake shoes ... ..	9
—To remove and refit ... ..	9
—Brake shoe adjuster... ..	10
—To remove and refit ... ..	10
—Rear brake back plate ... ..	10
—To remove and refit ... ..	10
—Rear wheel cylinders ... ..	11
—To remove and refit ... ..	11
—To dismantle and reassemble ... ..	12