

STEERING GEAR

SECTION J

CONTENTS

	Page
DESCRIPTION	3
ROUTINE MAINTENANCE	3
STEERING WHEEL	3
—To remove and refit	3
STEERING UNIT	4, 13
—To remove and refit	4
—Convolute and conical covers	5
—To remove and refit	5
—To refill—Oil	6
—Track rods	6
—To remove and refit	6
—Reconditioned steering units	6
—To dismantle and reassemble	6
STEERING COLUMN	9
—To remove and refit	9
—Inner column attachment	10
—To dismantle and reassemble	11
DIRECTION INDICATOR SWITCH AND PAWL UNIT	11
—To remove and refit	12
—Resetting the spring driver clip or bush	12
—To fit driver bush to existing cars	12
STEERING COLUMN BUSH	13
—To remove and refit	13