

REAR HUBS and DRIVE SHAFTS

SECTION G

CONTENTS

	Page
DESCRIPTION	2
REPLACEMENT DRIVE SHAFTS	2
—Drive shaft flexible coupling—To remove	4
—Drive shaft flexible coupling—To refit	4
—Hubs—To dismantle	4
—Hubs—To reassemble	5
—Universal joints—To dismantle	6
—Universal joints—To reassemble	7