

FRONT SUSPENSION

SECTION F

CONTENTS

DESCRIPTION	Page
DESCRIPTION	2
ROUTINE MAINTENANCE	2
FRONT SUSPENSION AND STEERING GEOMETRY	3
—Equipment required	3
—Preparation of vehicle	3
—Camber angle	5
—Front wheel alignment (toe-in)	6
—Castor angle	6
—Steering axis inclination	6
—Ackerman angles	7
FRONT SUSPENSION ASSEMBLY	7
—To remove and refit	7
—To dismantle and reassemble	9
SPEEDOMETER DRIVE	10
—To remove and refit	10
HUB ASSEMBLY	10
—To remove and refit	10
—Front hub adjustment	11
FRONT SPRINGS AND SHOCK ABSORBERS	12
—To check front spring height	12
—To remove and refit	12
—Testing by hand — Shock absorber	13
HUB AND SWIVEL PIN ASSEMBLY	14
—To remove and refit	14
SWIVEL PINS AND BUSHES	14
—To renew	14
—Welch washers	16
—Swivel pin bushes	16
WISHBONES	17
—To remove and refit	17
—Inner wishbone attachment	17
—Wishbone bushes	18