

CLUTCH

SECTION D

CONTENTS

	Page
GENERAL	2
MAINTENANCE	3
—Topping up fluid	3
MASTER CYLINDER	3
—Description	3
—To remove	3
—To dismantle and reassemble	3
—To refit	4
SLAVE CYLINDER	4
—Description	4
—To remove and refit... ..	5
—To dismantle and reassemble	5
BLEEDING THE SYSTEM	5
CLUTCH ASSEMBLY AND DRIVEN PLATE	6
—To remove and refit	6
—To dismantle the clutch	6
—To reassemble the clutch	7