

TRANSAXLE

SECTION E

CONTENTS

	Page
DESCRIPTION AND OPERATION	3
REMOVE AND REFIT TRANSAXLE	
—Remove transaxle from vehicle	7
—Remove transaxle from engine	9
—Refit transaxle to engine	9
—Refit transaxle to vehicle	9
—Fit transmission couplings	10
CHECK HYPOID AND PINION BEARINGS PRIOR TO DISMANTLING	
—Check hypoid bearings for wear	10
—Check gearbox bearings for wear... ..	11
TO DISMANTLE TRANSAXLE	
—Remove hypoid assembly from gearbox	12
—Dismantle hypoid assembly	23
—Dismantle the gearbox	12
TO REBUILD TRANSAXLE	
—Select shims for new pinion head bearing	15
—Select shims for new pinion tail bearing	17
—Fit new bushes to output shaft	17
—Selecting 1st, 3rd and 4th (selective) washers	17
—Fit new pinion bearings	18
—Select pre-load (selective) washers	19
—Renew input shaft ball bearing	19
—Renew input shaft needle bearing	20
—Reassemble synchro hub assemblies	20
—Reassemble gearbox... ..	21
—Reassemble hypoid assembly	25
—Adjust crown wheel for backlash and pre-load of bearings	26