

GEAR LEVER AND CONTROL SHAFT	Page
—Remove and refit gear lever and control shaft	30
—Remove and refit rear bearing	31
—Clean and lubricate gear change control shaft	31
 TO RENEW OIL SEALS	
—Clutch shaft oil seal	31
—Hypoid flange oil seal	32
REMOVE AND REFIT TRANSAXLE MOUNTINGS	33
RECLAMATION OF TAPPED HOLES IN TRANSAXLE CASINGS	34
TRANSAXLE FAULT FINDING AND RECTIFICATION	36
 ADDITIONAL INFORMATION	
—Interference fit differential shaft flanges	40
—Breather	42
—Differential thrust washers	42
—Spring ring synchro-mesh	43