

# FUEL SYSTEM

## SECTION C

### CONTENTS

	Page
<b>FUEL PUMP</b>	
—Description ... ..	3
—Cleaning ... ..	5
—To test in position ... ..	5
—Output pressure ... ..	5
—To remove ... ..	5
—To dismantle ... ..	5
—Inspection and overhaul ... ..	6
—To re-assemble ... ..	6
<b>CARBURETTOR—Type Solex B30 PIHT, B30 PIHT-2, B30 PIHT-3 and B30 PIH-5</b>	
—Description ... ..	9
—Operation ... ..	9
—Automatic choke ... ..	11
—Manual choke ... ..	12
—Idling circuit ... ..	13
—Main spraying circuit ... ..	14
—Accelerator pump ... ..	14
—Econostat circuit ... ..	14
—Starting the engine ... ..	14
—From cold ... ..	14
—When warm or hot ... ..	14
—Diagnosis of faults ... ..	14
—Excessive fuel consumption ... ..	15
—Insufficient top speed ... ..	15
—Faulty slow running... ..	16
—Flat spot at small throttle opening ... ..	16
—Poor acceleration ... ..	16
—Difficult starting from cold ... ..	16