



- 1. COVER SCREW
- 2. JOINT WASHER
- 3. FILTER COVER
- 4. FILTER GASKET
- 5. FILTER GAUZE
- 6. FUEL PIPE CONNECTIONS
- 7. UPPER BODY
- 8. VALVE GASKET
- 9. VALVE ASSEMBLIES
- 10. VALVE RETAINING PLATE
- 11. VALVE RETAINING SCREW
- 12. DIAPHRAGM ASSEMBLY
- 13. LINK ARM SPACING WASHERS
- 14. LINK
- 15. ROCKER ARM
- 16. ROCKER ARM SPRING
- 17. ROCKER ARM PIN RETAINERS
- 18. ROCKER ARM PIVOT PIN
- 19. LOWER BODY
- 20. PRIMING LEVER (CERTAIN PUMPS ONLY)
- 21. PRIMING LEVER RETURN SPRING
- 22. SPACER
- 23. LEVER
- 24. OIL SEAL WASHER—FABRIC } CERTAIN PUMPS ONLY.
- 25. OIL SEAL WASHER—METAL }
- 26. DIAPHRAGM SPRING
- 27. SPRING WASHER
- 28. SCREW-UPPER TO LOWER BODY

6987

Fig. 2. Exploded view of fuel pump