

**CARBURETTOR**

**TYPE—STROMBERG 125 CD**

DESCRIPTION	Page
...	31
<b>OPERATION</b>	
—Fuel level	31
—Starting	32
—Slow running	34
—Part and full throttle	34
—Acceleration	35
<b>STARTING THE ENGINE</b>	
—From cold	36
—When warm or hot	36
<b>DIAGNOSIS OF FAULTS</b>	
—Excessive fuel consumption	36
—Faulty slow running	37
—Insufficient top speed	37
—Flat spot at small throttle openings	37
—Poor acceleration	37
—Difficult starting from cold	37
<b>ADJUSTMENTS</b>	
—Slow running and synchronising carburettors	36
—Starter assembly interconnection	40
—Starter assembly travel stops	40
—Choke control	40
—Fast idle speed for cold starting	40
—Float level	41
—Needle position	41
—Centralising jet	41
—Full throttle position and accelerator pedal position	42
<b>SERVICING</b>	
—Piston hydraulic damper	42
—Diaphragm—to renew	42
—Piston return spring	43
—Dismantling for cleaning	43
—Cleaning	43
—Reassembly after cleaning	43
—Removal and refitting	43