

AIR CLEANER

—USED WITH TWIN STROMBERG 125 CDS CARBURETTORS—

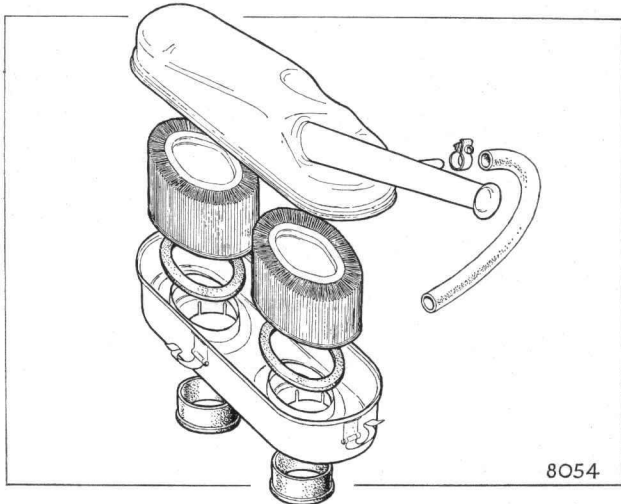


Fig. 15. Air cleaner used with twin Stromberg 125 CDS carburetors

AIR CLEANER (See Fig. 15)

The intervals at which the air cleaner elements require renewal will vary according to the operating conditions. For town work and such areas where the roads are almost

dust free, elements need only be renewed at intervals of 15,000 miles (24,000 kms.), but in areas where the atmosphere is smoke laden, foggy, or dusty, renewal will be needed at more frequent intervals.

To remove and renew filter elements

1. Disconnect the flame trap hose from the filter air intake tube.
2. Release the four spring clips and remove the air cleaner upper body. Should this be difficult press down on the engine oil filler cover with the palm of the other hand. Take out and discard both elements.
3. Clean out the air cleaner upper and lower bodies ensuring that dust does not enter the carburettor intakes.
4. Fit two new filter elements, each on to its rubber sealing ring, with the closed end of the element facing upwards.
5. Refit the air cleaner upper body. Fasten the four spring clips and re-connect the flame trap hose to filter air intake tube.