

ENGINE

SECTION B

CONTENTS

	Page
GENERAL DESCRIPTION	8
TORQUE SPANNER SETTINGS —See General Data	
GENERATOR	
—To adjust belt tension	9
SPARKING PLUGS	
—Examination and cleaning	10
—To adjust and clean	11
IGNITION TIMING AND DISTRIBUTOR	11
—To check ignition timing	12
—Stroboscopic timing light—how it operates	13
—advantages	13
—precautions needed... ..	13
—checking timing	13
—checking centrifugal advance	14
—checking vacuum advance	14
DISTRIBUTOR	
—To remove and refit	14
—To fit replacement distributor	14
LUBRICATION	
—General description... ..	14
FULL FLOW OIL FILTER	
—Description	16
—Oil pressure relief valve	17
—Filter by pass valve	17
—Filter element—to renew	17
REASONS FOR LOW OIL PRESSURE	18